

User Manual


About this Manual

Thank you for choosing DIALN smart phone. In order to keep your phone in its best condition, please read this manual and keep it for future reference.

Table of Contents

1 Overview	3
2 Getting started	
2.1 Set up	4
2.2 Powering on the phone	5
2.3 Powering off the phone	5
3 Home screen	5
4 Application	7
4.1 Camera	7
4.1.1 Taking a picture	7
4.1.2 Recording a video	7
4.2 Photo gallery	7
4.2.1 Photo	8
4.2.2 Video	8
4.3 Clock	8
4.4 Sound recording	8
4.5 FM radio	
4.6 Playing music	9
4.7 Calendar	10
5 Making a call	10
6 General information	12

1 Overview

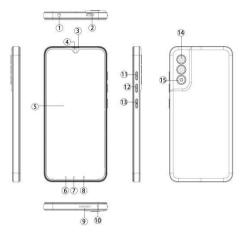

1	Headset Connector	9	Speaker
2	Type C connector	10	Mic
3	Receiver	11	Volume up key
4	Front-facing camera	12	Volume down key
5	Touch screen	13	Power key
6	Back	14	Camera
7	Home	15	Camera Flash/Flashlight
8	Menu		

As shown in above phone figures: major components and interfaces are highlighted, there are 3 hardware keys: Power key for phone to power on/off; Volume keys for volume up and down respectively.

2 Getting started

2.1 Set up

Removing or replacing the back cover Inserting or removing the Micro SIM card



Following the instructions illustrated in above picture, you can insert the Micro SIM card into the SIM compartment with gold contacts facing down, or remove the SIM card by pushing the top of SIM card from opening and pull it out.

This phone supports Micro SIM card only.

Do not attempt to insert a non-micro SIM card as it may damage the phone's SIM card slot.

2.2 Powering on the phone

Press and hold the Power key for a few seconds to power on your phone.

Set up your phone for the first time

The first time you power on the phone, you should set it up following the below steps:

- 1. Select the phone's language, and then press "Start".
- 2. Connect to Wi-Fi, then enter password.

- Set up Gmail and Services by following the prompts, view Terms and select "I agree".
- 4. Set up the "Protect your phone feature". This feature prevents others from using your phone without your permission.
- Next, the Google Services page will be displayed. Choose the services you wish to use and select "Accept" from the options at the bottom of your screen.

Note: Even without a SIM card installed, your phone will still power on and you will be able to connect to a Wi-Fi network and use some of the phone features.

2.3 Powering off your phone

While the phone is on, press and hold the Power key until the popup menu appears, select Power off to confirm.

3 Home screen

You can organize all of the items (applications, shortcuts, folders and widgets) that you use most frequently to your Home screen for quick access. Touch the Home key to get back to the Home screen. Swipe the Home screen upward to view additional screens



4 Application

4.1 Camera

Touch the camera icon on Home screen, you can use the camera APP to take photos and videos, and then share with people, further you can select a photo as your wallpaper.

4.1.1 Taking a picture

To take a picture, touch the camera icon on Home screen to open camera APP, aim the lens at the subject, make necessary adjustments, then touch or press volume key to take a photo.

4.1.2 Recording a video

To record a video, touch the camera icon on Home screen, touch Video. Then touch to start recording and touch again to stop recording. You can pause the recording by clicking the icon in the lower right corner, click the icon to save screenshot when recording, the video is saved automatically when ending the recording.

4.2 Photo gallery

Touch the Photos disconting icon on Home screen, you can view, share, edit, delete your pictures/videos saved on your phone or memory card.

4.2.1 Photo

When viewing photos, you can view photos in a slideshow, view photo details. You also have options to share photos, use photo as contact photos or as wallpapers, etc.

4.2.2 Video

Similarly, when viewing video items, select a desired video, touch $\begin{aligned} 1 \label{eq:select} 1$

4.3 Clock

Touch clock ^{See} on Home screen, you can set alarm, clock, timer, stopwatch, etc.

4.4 Sound recording

Touch Sound Recorder on home screen to open the APP, touch to start recording, touch to pause recording. Once done, touch to save the recording. Other options can be found by touching to display Recording list. You can replay any item on the list by touching it. Long press any item on the list to bring up further options for you to choose: to share, to delete, and for more options (such as Rename, set as ringtone, etc.)

4.5 FM Radio

Plug in headphones firstly. Touch FM radio **b** on home screen and click "On", you can listen to music and news on FM radio.

4.6 Playing music

Touch YTMusic ⁹ on Home screen to play music or recorded files. Note some files which may not support the format or exceed the limit may not play properly. Select a music file and you can control playback with following icons.

lcons	Functions
	Touch to pause playback
	Touch to resume playback
	Touch to skip backward, or scan backward
	Touch to skip forward, or scan forward
ţ	Touch to change the repeat mode
ス	Touch to activate shuffle mode
\equiv_*	Touch to show the current playlist

4.7 Calendar

Touch Calendar on Home screen, you can use the calendar to add events and manage events. To delete or edit an event you have added, touch the event to bring up options, at to edit, "Save" to save the event, it to select "Delete" or "Duplicate" and confirm when prompted.

5 Making a Call

Place a call using Call C by touching the Application tab from the Home screen and select Call C.



To make a regular phone call, choose from the following options:

Enter the desired number directly into dial pad, then touch¹, or directly touch the contact to place a call.

If an error is made when inputting a phone number, you can delete the incorrect digit(s) by touching To hang up a call, touch

6 General Information

Website

As our valuable customers, you can find our company and products information at our Website <u>www.dialn.tech</u>, plus frequently asked questions on this phone. You are welcome to contact us via email for any question and comment you may have.

Protection against theft

Your mobile phone is identified by an IMEI (mobile phone serial number) shown on the packaging label and in the product memory. Please keep this IMEI number in a safe place. It may be requested by the police or your operator if your mobile phone is stolen.

Disclaimer

There may be certain differences between the user manual description and the operation of mobile phone, depending on the software release of your mobile phone or specific operator services.

DIVIN

Google, Android, Google Play, YouTube and other marks are trademarks of Google LLC.