

DIALN

Nova



User Manual


About this Manual

Thank you for choosing DIALN smart phone. In order to keep your phone in its best condition, please read this manual and keep it for future reference.

Table of Contents

1 Overview-----	3
2 Getting started-----	4
2.1 Set up-----	4
2.2 Powering on the phone-----	5
2.3 Powering off the phone-----	5
3 Home screen-----	5
4 Application-----	7
4.1 Camera-----	7
4.1.1 Taking a picture-----	7
4.1.2 Recording a video-----	7
4.2 Photo gallery-----	7
4.2.1 Photo-----	8
4.2.2 Video-----	8
4.3 Clock-----	8
4.4 Sound recording-----	8
4.5 FM radio-----	9
4.6 Playing music-----	9
4.7 Calendar-----	10
5 Making a call-----	10
6 General information-----	12

 1 Overview

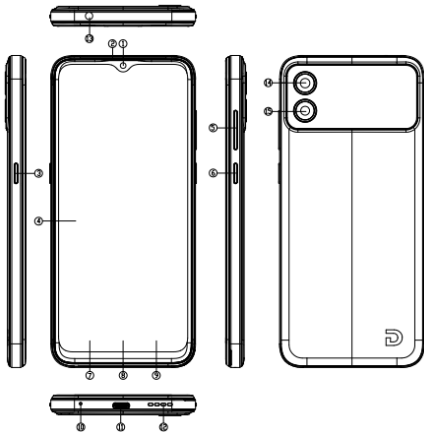


1	Front-facing camera	9	Menu Mic
2	receiver	10	Mic
3	Shortcut key	11	Type C connector
4	LCD	12	Speaker
5	Volume key	13	Headset Connector
6	Power key	14	Back Camera
7	Back	15	Flash/Flashlight
8	Home		

As shown in above phone figures: major components and interfaces are highlighted, there are 3 hardware keys: Power key for phone to power on/off; Volume keys for volume up and down respectively.

2 Getting started

2.1 Set up

 1. Removing or replacing the back cover
2. Inserting or removing the Nano SIM card

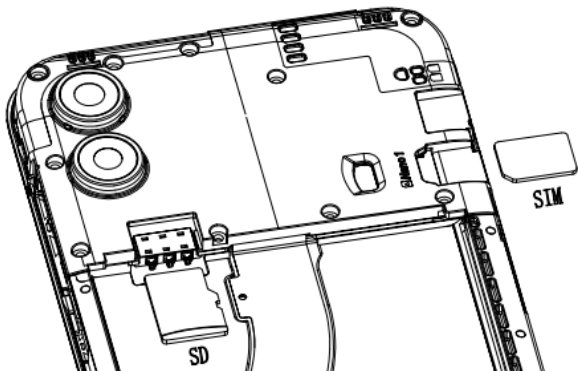

Following the instructions illustrated in above picture, you can insert the Nano SIM card into the SIM compartment with gold contacts facing down, or remove the SIM card by pushing the top of SIM card from opening and pull it out.

This phone supports Nano SIM card only.

Do not attempt to insert a non-Nano SIM card as it may damage the phone's SIM card slot.

2.2 Powering on the phone

Press and hold the Power key for a few seconds to power on your phone.

Set up your phone for the first time

The first time you power on the phone, you should set it up following the below steps:

1. Select the phone's language, and then press "Start".
2. Connect to Wi-Fi, then enter password.
3. Set up Gmail and Services by following the prompts, view Terms and select "I agree".
4. Set up the "Protect your phone feature". This feature prevents others from using your phone without your permission.
5. Next, the Google Services page will be displayed. Choose the services you wish to use and select "Accept" from the options at the bottom of your screen.

Note: Even without a SIM card installed, your phone will still power on and you will be able to connect to a Wi-Fi network and use some of the phone features.

2.3 Powering off your phone

While the phone is on, press and hold the Power key until the pop-up menu appears, select Power off to confirm.

3 Home screen

You can organize all of the items (applications, shortcuts, folders and widgets) that you use most frequently to your Home screen for quick access. Touch the Home key to get back to the Home screen. Swipe the Home screen upward to view additional screens



Status bar
Status/Notification
Touch and drag down to open the notification panel.


Search bar
Touch text box to enter text search screen.
Touch voice icon to enter voice search screen.

Favorite tray applications
Touch to open an application.
Touch and hold to move an application.



Touch an icon to open an application, folder, etc.

4 Application





4.1 Camera

Touch the camera  icon on Home screen, you can use the camera APP to take photos and videos, and then share with people, further you can select a photo as your wallpaper.


4.1.1 Taking a picture

To take a picture, touch the camera  icon on Home screen to open camera APP, aim the lens at the subject, make necessary adjustments, then touch  or press volume key to take a photo.

4.1.2 Recording a video

To record a video, touch the camera  icon on Home screen, touch Video. Then touch  to start recording and touch again to stop recording. You can pause the recording by clicking the  icon in the lower right corner, click the  icon to save screenshot when recording, the video is saved automatically when ending the recording.



 


4.2 Photo gallery

Touch the Photos  icon on Home screen, you can view, share, edit, delete your pictures/videos saved on your phone or memory card.


4.2.1 Photo

When viewing photos, you can view photos in a slideshow, view photo details. You also have options to share photos, use photo as contact photos or as wallpapers, etc.









4.2.2 Video

Similarly, when viewing video items, select a desired video, touch  to play the video. Further, touch the video, you can select  to share or select  to delete or  to edit the video, you can have more choices by touch the menu , then pick an option, Loop video on, View in, Delete from device, Slideshow, or Help & feedback.


4.3 Clock

Touch clock  on Home screen, you can set alarm, clock, timer, stopwatch, etc.


4.4 Sound recording






 

Touch Sound Recorder  on home screen to open the APP, touch  to start recording, touch  to pause recording. Once done, touch  to save the recording. Other options can be found by touching  to display Recording list. You can replay any item on the list by touching it. Long press any item on the list to bring up further options for you to choose:  to share,  to delete, and  for more options (such as Rename, set as ringtone, etc.)

4.5 FM Radio




Plug in headphones firstly. Touch FM radio  on home screen and click "On", you can listen to music and news on FM radio.

4.6 Playing music



Touch YTMusic  on Home screen to play music or recorded files. Note some files which may not support the format or exceed the limit may not play properly. Select a music file and you can control playback with following icons.


Icons	Functions
	Touch to pause playback
	Touch to resume playback
	Touch to skip backward, or scan backward
	Touch to skip forward, or scan forward
	Touch to change the repeat mode
	Touch to activate shuffle mode
	Touch to show the current playlist

4.7 Calendar


Touch Calendar  on Home screen, you can use the calendar to add events and manage events. To delete or edit an event you have added, touch the event to bring up options,  to edit, “Save” to save the event,  to select “Delete” or “Duplicate” and confirm when prompted.


5 Making a Call

 
Place a call using Call  by touching the Application tab from the Home screen and select Call .

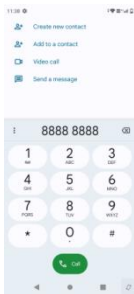

To make a regular phone call, choose from the following options:

Enter the desired number directly into dial pad, then touch , or directly touch the contact to place a call.

If an error is made when inputting a phone number, you can delete the incorrect digit(s) by touching  .

To hang up a call, touch .

6 General Information

Website

As our valuable customers, you can find our company and products information at our Website www.dialn.tech, plus frequently asked questions on this phone. You are welcome to contact us via email for any question and comment you may have.

Protection against theft

Your mobile phone is identified by an IMEI (mobile phone serial number) shown on the packaging label and in the product memory. Please keep this IMEI number in a safe place. It may be requested by the police or your operator if your mobile phone is stolen.

Disclaimer

There may be certain differences between the user manual description and the operation of mobile phone, depending on the software release of your mobile phone or specific operator services.

DIALN

Google, Android, Google Play, YouTube and other marks are trademarks of Google LLC.